



2008 Maintenance Schedule

	Miles Kilometres	5 8	15 25	25 40	35 55	45 70	55 85	65 100	75 115	85 130	95 145	105 160
Engine Oil – change oil and replace filter		●	●	●	●	●	●	●	●	●	●	●
Wiper Blades – check condition and replace if necessary		●	●	●	●	●	●	●	●	●	●	●
Wiper/Washer/Headlight Washer – check adjustment and function, add fluid if necessary		●	●	●	●	●	●	●	●	●	●	●
Tires and Spare – check for wear and damage, check pressure		●		●		●		●		●		●
– check for wear and damage, check pressure and renewal date of tire set (where applicable)			●		●		●		●		●	
Tires – rotate (5K only)		●										
Service Reminder Display – reset		●	●	●	●	●	●	●	●	●	●	●
Brake System – check for damage, leaks, pad thickness, fluid level		●	●	●	●	●	●	●	●	●	●	●
Cooling System – check level, add if necessary			●		●		●		●		●	
Exhaust System – check for damage, leaks			●		●		●		●		●	
Engine OBD – check fault memory			● Except Q7, TT, A5, S5, and R8		● Except Q7, TT, A5, S5, and R8		● Except Q7, TT, A5, S5, and R8		● Except Q7, TT, A5, S5, and R8		● Except Q7, TT, A5, S5, and R8	
Engine Compartment – check for leaks			●		●		●		●		●	
Battery – check and replace if necessary			●		●		●		●		●	
Dust and Pollen Filter – replace			●		●		●		●		●	
Automatic Transmission and Final Drive – check for leaks			●		●		●		●		●	
Manual Transmission and Final Drive – check for leaks			●		●		●		●		●	
Haldex Clutch – change oil					● A3, TT only				● A3, TT only			
Front Axle – check for excessive play, check dust seals on ball joints and tie rod ends			● Except Q7, TT, A5, S5, R8		●		● Except Q7, TT, A5, S5, R8		●		● Except Q7, TT, A5, S5, R8	
Lights – check all lights, check headlight adjustment			● A8, S8 only		● Except Q7, TT, A5, S5, R8		● A8, S8 only		● Except Q7, TT, A5, S5, R8		● A8, S8 only	
Drive Shaft Boots – check			●		●		●		●		●	
Doors – lubricate doors, check straps and hood latch			● A8, S8 only		●		● A8, S8 only		●		● A8, S8 only	
Spark Plugs – replace at 35,000 miles or 3 years, whichever occurs first. Then, every 40,000 miles or 3 years, whichever occurs first					● Only A3 3.2L, TT 3.2L, A8 6.0L							
– replace at 55,000 miles or 6 years, whichever occurs first. Then, every 60,000 miles or 6 years, whichever occurs first							● Except A3 3.2L, TT 3.2L, A8 6.0L					
– replace at 75,000 miles									● Only A3 3.2L, TT 3.2L, A8 6.0L			
Continuously Variable Transmission (multitronic) – change ATF					●				●			
Power Steering Fluid – check, add if necessary					●				●			
Air Cleaner – clean housing, replace filter element					● RS4 A8 6.0L only		● Except RS4, Q7 4.2L, A8 6.0L		● RS4, Q7 4.2L, A8 6.0L only			

Brake Fluid – replace every 2 years, regardless of mileage

2008 Maintenance Schedule

	Miles Kilometres	5 8	15 25	25 40	35 55	45 70	55 85	65 100	75 115	85 130	95 145	105 160
Ribbed V Belt and Tensioner – check condition and replace if necessary			● RS4, R8 only		● RS4, Q7 3.6L A8 6.0L, R8 only		● RS4, R8 only		● RS4, Q7 3.6L A8 6.0L, R8 only		● RS4, R8 only	
Ribbed V Belt – replace									● S4 only			
– check condition and replace if necessary. Check Tension of beltdrive with manual tensioner and retension if necessary.									● 2.0L, 3.2L, 4.2L FSI, 5.2L only			
Snow Screen for Air Cleaner – clean			● A4, A5, S5 and A6 only		● A4, A5, S5 and A6 only		● A4, A5, S5 and A6 only		● A4, A5, S5 and A6 only		● A4, A5, S5 and A6 only	
Underbody – check for damage and leaks			●		●		●		●		●	
Road Test – check braking, kick-down, steering, electrical, heating and ventilation systems, airconditioning, ASL Automatic Shift Lock and power accessories			●		●		●		●		●	
Rear Lid Hinges – lubricate			● A8, S8 only		● A8, S8 only		● A8, S8 only		● A8, S8 only		● A8, S8 only	
Horn – check function			●		●		●		●		●	
Brake Discs – check thickness					●				●			
Lights – check all lights via instrument cluster. Check license plate light from the rear of the vehicle					● Q7, TT, A5, S5 and R8 only				● Q7, TT, A5, S5 and R8 only			
Interior Lights – check all interior lights, glove box illumination, control lights and MMI (if applicable)					●				●			
S Tronic – change oil and replace filter element					● A3, TT only				● A3, TT only			

At 110k miles (175km) Audi recommends replacing the Timing Belt on 2.0L engines. Check condition and replace, if necessary, the damper pulleys and idler pulleys of the Timing Belt Tensioning System.