



2007 Volkswagen Maintenance Schedule by Miles/Kilometers

Revised May 16, 2008

1.9L TDI (Canada only) Miles (in thousands)
Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•
Water Separator – drain	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 mile /16,000 Km service interval only) (where applicable)		•										
Windshield washer/headlight washer – check level; add if necessary		•	•	•	•	•	•	•	•	•	•	•
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•
Rear spoiler – lubricate (New Beetle only)		•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•	•	•	•	•	•	•	•	•	•
Engine OBD – check memory, purge if necessary			•	•	•	•	•	•	•	•	•	•
Fuel Filter – replace			•	•	•	•	•	•	•	•	•	•
Automatic Transmission – check for leaks			•	•	•	•	•	•	•	•	•	•
Front and Rear Lights and Interior Lights, Horn, Outlets – check			•	•	•	•	•	•	•	•	•	•
Battery – check			•	•	•	•	•	•	•	•	•	•
Door Arresters – lubricate			•	•	•	•	•	•	•	•	•	•
Sunroof Frame – lubricate (where applicable)			•	•	•	•	•	•	•	•	•	•
Cooling System – check coolant level; add if necessary			•	•	•	•	•	•	•	•	•	•
Exhaust System – check for damage and leaks			•	•	•	•	•	•	•	•	•	•
Tires/Spare wheel – check condition and pressure			•	•	•	•	•	•	•	•	•	•
Front Axle – check dust seals on ball joints and tie rods; check tie rods			•	•	•	•	•	•	•	•	•	•
Headlights – check and adjust if necessary			•	•	•	•	•	•	•	•	•	•
Drive Shafts – check boots			•	•	•	•	•	•	•	•	•	•
Manual Transmission – check for leaks and level; add if necessary (if applicable)			•	•	•	•	•	•	•	•	•	•
Road Test – check kick down, braking, steering heating and ventilation, air conditioning, power accessories and electrical systems			•	•	•	•	•	•	•	•	•	•
Wiper Blades – check			•	•	•	•	•	•	•	•	•	•
Underbody – check for damage			•	•	•	•	•	•	•	•	•	•
Ribbed Belt – check condition and tension; adjust if necessary			•	•	•	•	•	•	•	•	•	•
Automatic transmission final drive oil – check level and for leaks; add if necessary			•	•	•	•	•	•	•	•	•	•
Power steering – check fluid level			•	•	•	•	•	•	•	•	•	•
Dust and Pollen filter – replace				•	•	•	•	•	•	•	•	•
Automatic transmission – check ATF				•	•	•	•	•	•	•	•	•
Air Cleaner – replace filter and clean housing				•	•	•	•	•	•	•	•	•
Convertible top – check function and rollover protection				•	•	•	•	•	•	•	•	•
Timing Belt – replace								•	•	•	•	•

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid and check bolting device for convertible top

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km) in 6 years): Change air filter element and clean housing.

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

© 2008 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



2007 Volkswagen Maintenance Schedule by Miles/Kilometers

Revised May 16, 2008

2.0L (Canada only) Miles (in thousands)
Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 mile /16,000 Km service interval only) (where applicable)		•										
Windshield washer/headlight washer – check level; add if necessary		•	•	•	•	•	•	•	•	•	•	•
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•	•		•		•		•		•
Engine OBD – check memory, purge if necessary			•	•		•		•		•		•
Automatic Transmission – check for leaks			•	•		•		•		•		•
Battery – check			•	•		•		•		•		•
Door Arresters – lubricate			•	•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•	•		•		•		•		•
Cooling System – check coolant level; add if necessary			•	•		•		•		•		•
Exhaust System – check for damage and leaks			•	•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•	•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check tie rods			•	•		•		•		•		•
Headlights – check and adjust if necessary			•	•		•		•		•		•
Dust and Pollen filter – replace			•	•		•		•		•		•
Drive Shafts – check boots			•	•		•		•		•		•
Manual Transmission – check for leaks and level; add if necessary (if applicable)			•	•		•		•		•		•
Road Test – check kick down, braking, steering heating and ventilation, air conditioning, power accessories and electrical systems			•	•		•		•		•		•
Wiper Blades – check				•				•				•
Underbody – check for damage				•				•				•
Ribbed Belt – check condition and tension; adjust if necessary				•				•				•
Automatic transmission final drive oil – check level and for leaks; add if necessary				•				•				•
Interior lights and power outlets – check				•				•				•
Power steering – check fluid level				•				•				•
Spark Plugs – replace				•				•				•
Automatic transmission – check ATF				•				•				•
Air Cleaner – replace filter and clean housing				•				•				•
Timing Belt – check							•		•		•	
Timing Belt – replace												•

Every 2 years, regardless of mileage (kilometers): Change brake fluid and check bolting device for convertible top

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km) in 6 years): Change air filter element and clean housing.

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

© 2008 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



2007 Volkswagen Maintenance Schedule by Miles/Kilometers

Revised May 16, 2008

2.0L TFSI

Miles (in thousands)
Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset <i>(where applicable)</i>	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt <i>(for 10,000 mile /16,000 Km service interval only) (where applicable)</i>		•										
Windshield washer/headlight washer – check level; add if necessary		•	•	•	•	•	•	•	•	•	•	•
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•	•	•	•	•	•	•	•	•	•
Engine OBD – check memory, purge if necessary			•	•	•	•	•	•	•	•	•	•
Automatic Transmission – check for leaks			•	•	•	•	•	•	•	•	•	•
Battery – check			•	•	•	•	•	•	•	•	•	•
Door Arresters – lubricate			•	•	•	•	•	•	•	•	•	•
Sunroof Frame – lubricate <i>(where applicable)</i>			•	•	•	•	•	•	•	•	•	•
Cooling System – check coolant level; add if necessary			•	•	•	•	•	•	•	•	•	•
Exhaust System – check for damage and leaks			•	•	•	•	•	•	•	•	•	•
Tires/Spare wheel – check condition and pressure			•	•	•	•	•	•	•	•	•	•
Front Axle – check dust seals on ball joints and tie rods; check tie rods			•	•	•	•	•	•	•	•	•	•
Headlights – check and adjust if necessary			•	•	•	•	•	•	•	•	•	•
Drive Shafts – check boots			•	•	•	•	•	•	•	•	•	•
Manual Transmission – check for leaks and level; add if necessary			•	•	•	•	•	•	•	•	•	•
Road Test – check kick down, braking, steering heating and ventilation, air conditioning, power accessories and electrical systems			•	•	•	•	•	•	•	•	•	•
Retractable Hard Top (CSC™roof): check function and for damage <i>(Eos only)</i>				•	•	•	•	•	•	•	•	•
Interior lights and Power Outlets – check				•	•	•	•	•	•	•	•	•
Dust and Pollen filter – replace				•	•	•	•	•	•	•	•	•
Wiper Blades – check				•	•	•	•	•	•	•	•	•
Underbody – check for damage				•	•	•	•	•	•	•	•	•
Ribbed Belt – check condition and tension; adjust if necessary				•	•	•	•	•	•	•	•	•
Automatic transmission – check ATF				•	•	•	•	•	•	•	•	•
Automatic transmission final drive oil – check level and for leaks; add if necessary				•	•	•	•	•	•	•	•	•
Power steering – check fluid level <i>(where applicable)</i>				•	•	•	•	•	•	•	•	•
Direct Shift Transmission (DSG) – change fluid and replace filter				•	•	•	•	•	•	•	•	•
Timing Belt – check						•	•	•	•	•	•	•
Air Cleaner – replace filter and clean housing						•	•	•	•	•	•	•
Spark Plugs – replace						•	•	•	•	•	•	•
Timing Belt and tensioning roller – replace												•

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced *(Observe expiration date)*.

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors *(If available)*.

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change spark plugs *(Only 2.0L TFSI 200 hp)* and Air filter element.

© 2008 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



2007 Volkswagen Maintenance Schedule by Miles/Kilometers

Revised May 16, 2008

2.5L

Miles (in thousands)
Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 mile /16,000 Km service interval only) (where applicable)		•											
Windshield washer/headlight washer – check level; add if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•	•
Rear spoiler – lubricate (New Beetle only)		•	•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•		•		•		•		•		•
Engine OBD – check memory, purge if necessary			•		•		•		•		•		•
Automatic Transmission – check for leaks			•		•		•		•		•		•
Battery – check			•		•		•		•		•		•
Door Arresters – lubricate			•		•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•		•		•		•		•		•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check tie rods			•		•		•		•		•		•
Headlights – check and adjust if necessary			•		•		•		•		•		•
Drive Shafts – check boots			•		•		•		•		•		•
Manual Transmission – check for leaks and level; add if necessary			•		•		•		•		•		•
Road Test – check kick down, braking, steering heating and ventilation, air conditioning, power accessories and electrical systems			•		•		•		•		•		•
Dust and Pollen filter – replace (where applicable)					•				•				•
Air Cleaner – replace filter and clean housing (New Beetle only)					•				•				•
Wiper Blades – check					•				•				•
Interior Lights and Power Outlets – check					•				•				•
Underbody – check for damage					•				•				•
Ribbed Belt – check condition and tension; adjust if necessary					•				•				•
Automatic transmission – check ATF					•				•				•
Automatic transmission final drive oil – check level and for leaks; add if necessary					•				•				•
Spark Plugs – replace									•				•
Power steering – check fluid level (where applicable)									•				•
Direct Shift Transmission (DSG) – change fluid and replace filter (where applicable)									•				•
Air Cleaner – replace filter and clean housing									•				•

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid and check bolting device for convertible top.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 4 years, regardless of mileage (kilometers): Change air filter element and clean housing (New Beetle only).

Every 4 years (for vehicles driven less than 40,000 miles (60,000 Km in 4 years): Change spark plugs.

Every 6 years, (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change air filter element and clean housing (except New Beetle).

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

© 2008 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



2007 Volkswagen Maintenance Schedule by Miles/Kilometers

Revised May 16, 2008

3.2L

Miles (in thousands)
Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

	5	10	20	30	40	50	60	70	80	90	100	110	120
Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 mile /16,000 Km service interval only) (where applicable)		•											
Windshield washer/headlight washer – check level; add if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•		•		•		•		•		•
Engine OBD – check memory, purge if necessary			•		•		•		•		•		•
Battery – check			•		•		•		•		•		•
Automatic Transmission – check for leaks			•		•		•		•		•		•
Manual Transmission – check for leaks and level; add if necessary			•		•		•		•		•		•
Door Arresters – lubricate			•		•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•		•		•		•		•		•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check tie rods			•		•		•		•		•		•
Headlights – check and adjust if necessary			•		•		•		•		•		•
Drive Shafts – check boots			•		•		•		•		•		•
Road Test – check kick down, braking, steering heating and ventilation, air conditioning, power accessories and electrical systems			•		•		•		•		•		•
Retractable Hard Top (CSC™roof): check function and for damage (Eos only)					•				•				•
Automatic transmission – check ATF					•				•				•
Interior Lights and Power Outlets – check					•				•				•
Spark Plugs – replace					•				•				•
Dust and Pollen filter – replace					•				•				•
Wiper Blades – check					•				•				•
Underbody – check for damage					•				•				•
Ribbed Belt – check condition and tension; adjust if necessary					•				•				•
Automatic transmission final drive oil – check level and for leaks; add if necessary					•				•				•
Power steering – check fluid level (where applicable)					•				•				•
Direct Shift Transmission (DSG) – change fluid and replace filter (where applicable)					•				•				•
Air Cleaner – replace filter and clean housing							•						•

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 4 years (for vehicles driven less than 40,000 miles (60,000 Km in 4 years): Change spark plugs.

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change air filter element and clean housing.

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

© 2008 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



2007 Volkswagen Maintenance Schedule by Miles/Kilometers

Revised May 16, 2008

3.6L FSI

Miles (in thousands)
Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 mile /16,000 Km service interval only) (where applicable)		•										
Windshield washer/headlight washer – check level; add if necessary		•	•	•	•	•	•	•	•	•	•	•
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•	•		•		•		•		•
Engine OBD – check memory, purge if necessary			•	•		•		•		•		•
Automatic Transmission – check for leaks			•	•		•		•		•		•
Battery – check			•	•		•		•		•		•
Door Arresters – lubricate			•	•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•	•		•		•		•		•
Cooling System – check coolant level; add if necessary			•	•		•		•		•		•
Exhaust System – check for damage and leaks			•	•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•	•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check tie rods			•	•		•		•		•		•
Headlights – check and adjust if necessary			•	•		•		•		•		•
Drive Shafts – check boots			•	•		•		•		•		•
Road Test – check kick down, braking, steering heating and ventilation, air conditioning, power accessories and electrical systems			•	•		•		•		•		•
Interior lights, Horn and Power Outlets – check function				•				•				•
Air Suspension – check for leaks and damage (Touareg only)				•				•				•
Dust and Pollen filter – replace				•				•				•
Wiper Blades – check				•				•				•
Underbody – check for damage				•				•				•
Ribbed Belt – check condition and tension; adjust if necessary				•				•				•
Automatic transmission – check ATF				•				•				•
Automatic transmission final drive oil – check level and for leaks; add if necessary				•				•				•
Power steering – check fluid level (where applicable)				•				•				•
Haldex clutch – change fluid (where applicable)				•				•				•
Direct Shift Transmission (DSG) – change fluid and replace filter (where applicable)				•				•				•
Spark Plugs – replace								•				•
Air Cleaner – replace filter and clean housing								•				•
Air Cleaner – replace filter and clean housing and snow filter (Touareg only)								•				•

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 4 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change air filter element and clean housing.

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change spark plugs

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

© 2008 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



2007 Volkswagen Maintenance Schedule by Miles/Kilometers

Revised May 16, 2008

4.2L FSI

Miles (in thousands)
Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Windshield washer/headlight washer – check level; add if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•		•		•		•		•		•
Engine OBD – check memory, purge if necessary			•		•		•		•		•		•
Automatic Transmission – check for leaks			•		•		•		•		•		•
Battery – check			•		•		•		•		•		•
Door Arresters – lubricate			•		•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•		•		•		•		•		•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check tie rods			•		•		•		•		•		•
Headlights – check and adjust if necessary			•		•		•		•		•		•
Drive Shafts – check boots			•		•		•		•		•		•
Road Test – check kick down, braking, steering heating and ventilation, air conditioning, power accessories and electrical systems			•		•		•		•		•		•
Air Suspension – check for leaks and damage					•				•				•
Interior lights, Horn and Power Outlets – check function					•				•				•
Dust and Pollen filter – replace					•				•				•
Wiper Blades – check					•				•				•
Underbody – check for damage					•				•				•
Ribbed Belt – check condition					•				•				•
Automatic transmission – check ATF					•				•				•
Automatic transmission final drive oil – check level and for leaks; add if necessary					•				•				•
Power steering – check fluid level (where applicable)					•				•				•
Spark Plugs – replace									•				•
Air Cleaner – replace filter and clean housing and clean snow screen (if available)									•				•
Timing Belt – replace									•				•

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change spark plugs.

© 2008 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



2007 Volkswagen Maintenance Schedule by Miles/Kilometers

Revised May 16, 2008

5.0L V10

Miles (in thousands)
Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

	5	10	20	30	40	50	60	70	80	90	100	110	120
Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Water Separator – drain	•	•	•	•	•	•	•	•	•	•	•	•	•
Windshield washer/headlight washer – check level; add if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Turbocharger – lubricate servomotor rods			•		•		•		•		•		•
Engine – check for leaks			•		•		•		•		•		•
Engine OBD – check memory, purge if necessary			•		•		•		•		•		•
Automatic Transmission – check for leaks			•		•		•		•		•		•
Battery – check			•		•		•		•		•		•
Door Arresters – lubricate			•		•		•		•		•		•
Sunroof Frame – lubricate <i>(where applicable)</i>			•		•		•		•		•		•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Fuel Filter – replace			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check tie rods			•		•		•		•		•		•
Headlights – check and adjust if necessary			•		•		•		•		•		•
Drive Shafts – check boots			•		•		•		•		•		•
Road Test – check kick down, braking, steering heating and ventilation, air conditioning, power accessories and electrical systems			•		•		•		•		•		•
Battery and Second Battery – check					•				•				•
Air Suspension – check for leaks and damage					•				•				•
Interior lights, Horn and Power Outlets – check function					•				•				•
Dust and Pollen filter – replace					•				•				•
Wiper Blades – check					•				•				•
Underbody – check for damage					•				•				•
Ribbed Belt – check condition					•				•				•
Automatic transmission – check ATF					•				•				•
Automatic transmission final drive oil – check level and for leaks; add if necessary					•				•				•
Power steering – check fluid level <i>(where applicable)</i>					•				•				•
Diesel Particle Filter – replace <i>(all 5.0L V10 TDI engines)</i>													•
Air Cleaner – replace filter and clean housing and clean snow screen <i>(if available)</i>									•				

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years, regardless of mileage (kilometers): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced *(Observe expiration date)*.

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors *(If available)*.

© 2008 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.